



ACCENT CHAIR ASSEMBLY GUIDE



Unpack components for easy access to parts.
Note: The 3 Short screws are required for fastening the seat-back.



Place seat on flat surface, padded side facing down. Align seat mechanism as pictured. Fasten to the base of the seat cushion.
4 screws required.




Slide seat-back mount into base mechanism mounting plate. Align holes and fasten.
3 short screws required.



Align mounting plates of arms into place on seat bottom and fasten.
3 screws required per arm.



Slide silver side of gas cannister into base mechanism.
No fasteners required.

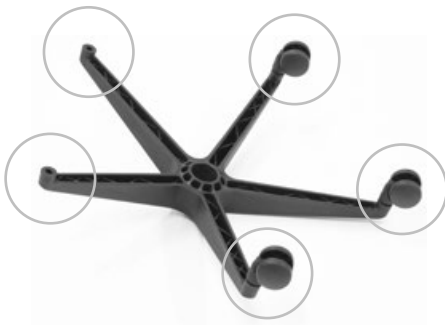

Clip castors into base.
Some pressure is required.



Slide the completed base onto gas cannister.

Required installation tools:
Allen key (provided)

