




## ASCOT CHAIR HIGHBACK WITH ARMS ASSEMBLY GUIDE



Unpack components for easy access to parts.  
**Long screws are required for fastening with plastic spacers (arms to seat).**

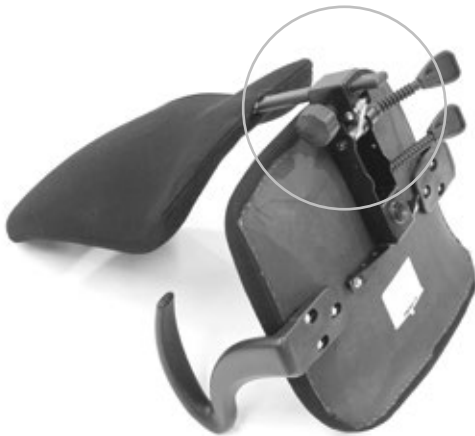

Place seat on side. Mount backrest to seat.  
**Compress button on bar and Slide seat-back mount into base.**



Slide thinner side of gas cannister into seat mechanism.  
**No fasteners required.**



Slide the completed base (with wheels) onto gas cannister.  
**Place chair upright, apply weight/sit to make sure gas cannister and base secured.**