


# SKETCH 900MM & 1350MM DESK ASSEMBLY GUIDE

Tools to assemble desk are not provided. You will need a flat and a star screwdriver to complete




Start the assembly by fitting the Cam pins into the metal inserts on the panel legs. Use the star screwdriver. Give the pin a firm tightening.

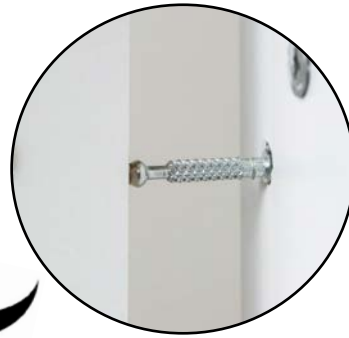

With the pins in position on the panel legs, slide the rear modesty panel onto the pins. Take care to ensure the cams are in the open position. Once the panels are in position, lock them in place by turning the cam to the locked position with the flat screwdriver.

**Note: Ensure to give a firm tightening.**

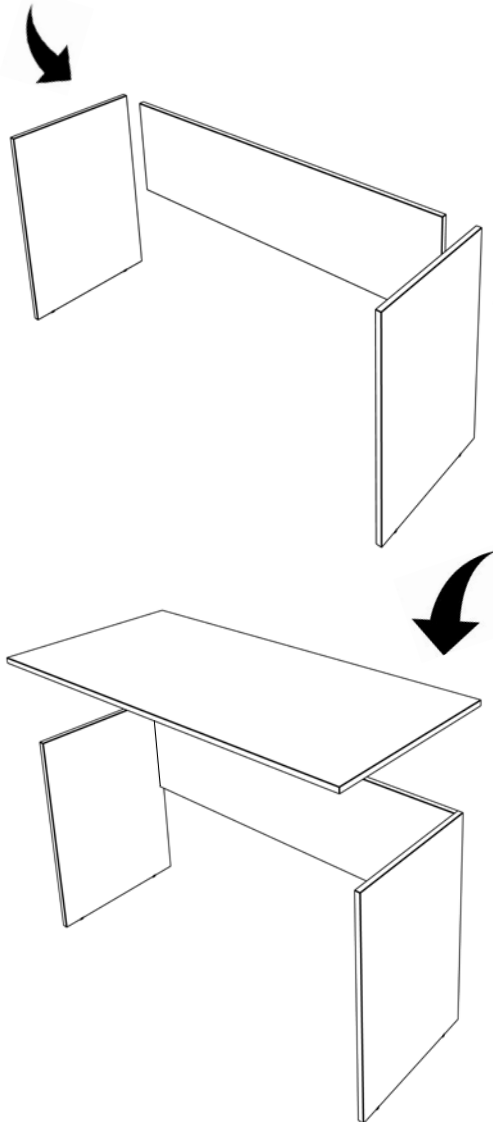

With the leg assembly constructed. Install cam pins into the underside of the desk top. Fit the top onto the leg assembly. Once the desktop is firmly in position, lock them in place by turning the cam to the locked position with the flat screwdriver.

**Note: A little nudging might be required to align all the holes.**

Once you are satisfied with the assembly and all cams have been locked in position, cover the silver cam screw heads with the white adhesive covers supplied.

